



SHOWERS & EYEBATHS

Your Safety Demands Our Quality

INSTALLATION, MAINTENANCE & OPERATING INSTRUCTIONS

MOBILE SHOWER WITH EYEBATH – GPS12

The unit is manufactured according to ANSI Z358.1 - 2009. It must be installed properly and in the correct location. Such equipment should be installed within 10 seconds reach if accident occurs; no closer than 3 metres or further than 15 metres. The area around and underneath the shower should provide good drainage, especially if there is a possibility of the water freezing. When equipment is located indoors waste water must be contained for subsequent safe disposal or there must be adequate drainage.

The mobile combined shower & eyewash requires a sound flat base.

Please contact Showers & Eyebaths technical department for further advice should this be necessary.

INSTALLATION INSTRUCTIONS

1. Fill unit with clean potable water.
2. Connect the power to the unit and leave for a minimum of 8hrs to warm the water if necessary or if there is no electric supply at final destination of unit. The immersion heater is ATEX certified (Zones 1 & 2). The power rating is 1.7Kw; 110-120v 1Ph 50-60Hz and 3Kw; 220-240v 1Ph 50-60Hz. Immersion heaters pre set to 18 deg C.
3. Units fitted with trace heating (LT models), ensure unit is connected to power supply to prevent freezing. Ensure insulated jacket is secure.
4. Ensure a full air cylinder and regulator (supplied by others) is securely strapped to unit.
5. Position unit in desired location with clear access.
6. Ensure brakes on the unit are applied (and wheel chucks if necessary) and the unit is secure.
7. Connect shower pipework to unit. Ensure shower valve is in upright position (i.e shower valve closed)
8. Open air cylinder valve on regulator. (this will ensure pneumatic pump is ready for use)
9. Unit is now ready to be used.
10. Test unit .

MAINTENANCE INSTRUCTIONS

1. Empty contained water regularly or after use.
2. Ensure air cylinders are full before strapping to unit. Air pressure required is 4 bar. (The safety release valve is set at 5.5 bar)
3. Unit should be serviced and cleaned regularly at least every six months in order to ensure proper operation.
4. Clean the shower with non abrasive cleaners only and polish.
5. Remove overhead shower nozzle, inspect and disinfect every six months.
6. Remove eyebath nozzles, inspect and disinfect every six months.
7. Check all fastenings for torque every 6 months.
8. Check all electrical connections every 6 months.
9. Replace eyebath nozzles annually.

OPERATING INSTRUCTIONS

1. Position shower handle downwards to operate shower. To turn off shower reset lever upwards.
2. Pull lid of eyebath down to operate eyebath. Close to turn off.

World Class Manufacturers of Showers & Eyebaths

Showers & Eyebaths Services Ltd
Safety House, 23c Sandwash Close, Rainford Industrial Estate,
Rainford, Lancashire, WA11 8LY U.K.
Tel +44 (0) 1744 889677 Fax +44 (0) 1744 885663.
e-mail: sales@safety-showers.com www.safety-showers.com
Company Registration No. 3447603 Vat No: 703 9281 41



AMP 3 Framework Supplier



SHOWERS & EYEBATHS

Your Safety Demands Our Quality

3. After use seek medical assistance.

DO NOT TURN POWER ON IF THERE IS NO WATER IN THE UNIT.
TURN AIR CYLINDER OFF WHEN NOT IN USE/REQUIRED.

World Class Manufacturers of Showers & Eyebaths

Showers & Eyebaths Services Ltd
Safety House, 23c Sandwash Close, Rainford Industrial Estate,
Rainford, Lancashire, WA11 8LY U.K.
Tel +44 (0) 1744 889677 Fax +44 (0) 1744 885663.
e-mail: sales@safety-showers.com www.safety-showers.com
Company Registration No. 3447603 Vat No: 703 9281 41



AMP 3 Framework Supplier